


Graceful High

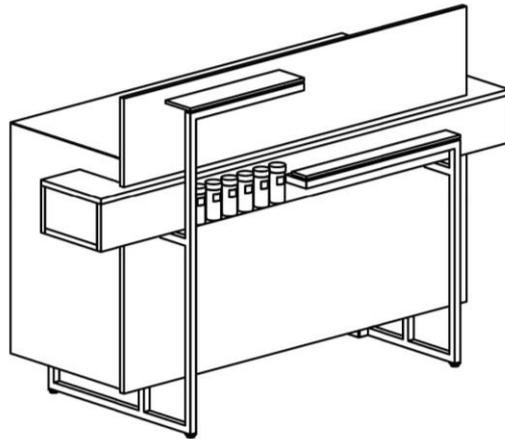

DE Montageanleitung

GB Mounting instructions

OLYMP GmbH & Co. KG, Germany
Hohenheimer Str. 91 - 97, 70184 Stuttgart
Postfach 10 36 63, 70031 Stuttgart
Telefon +49 711 2131-0
Telefax +49 711 2131-222

Graceful High MO

OLYMP[®]
BEST SALON INSPIRATION

751486

04-2023

Abb. / illustr. 1

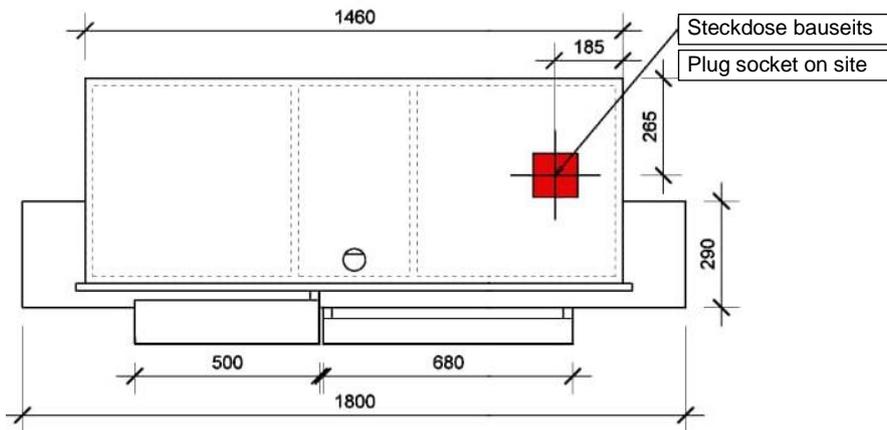
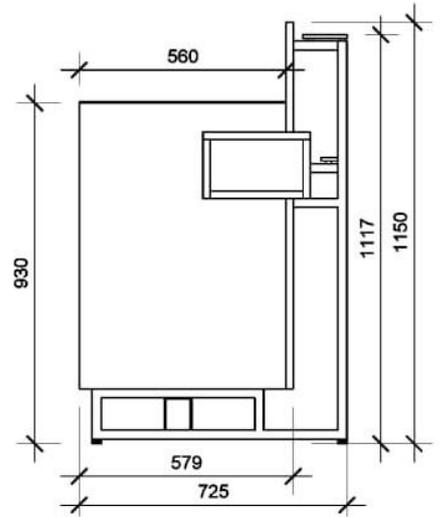
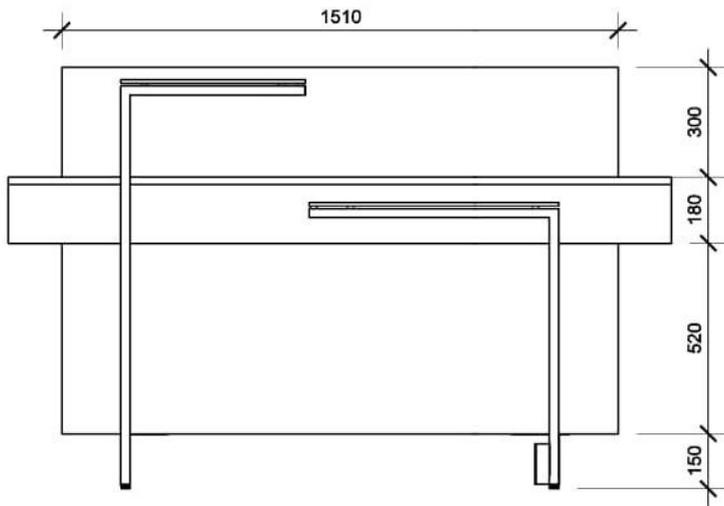


Abb. / illustr. 2

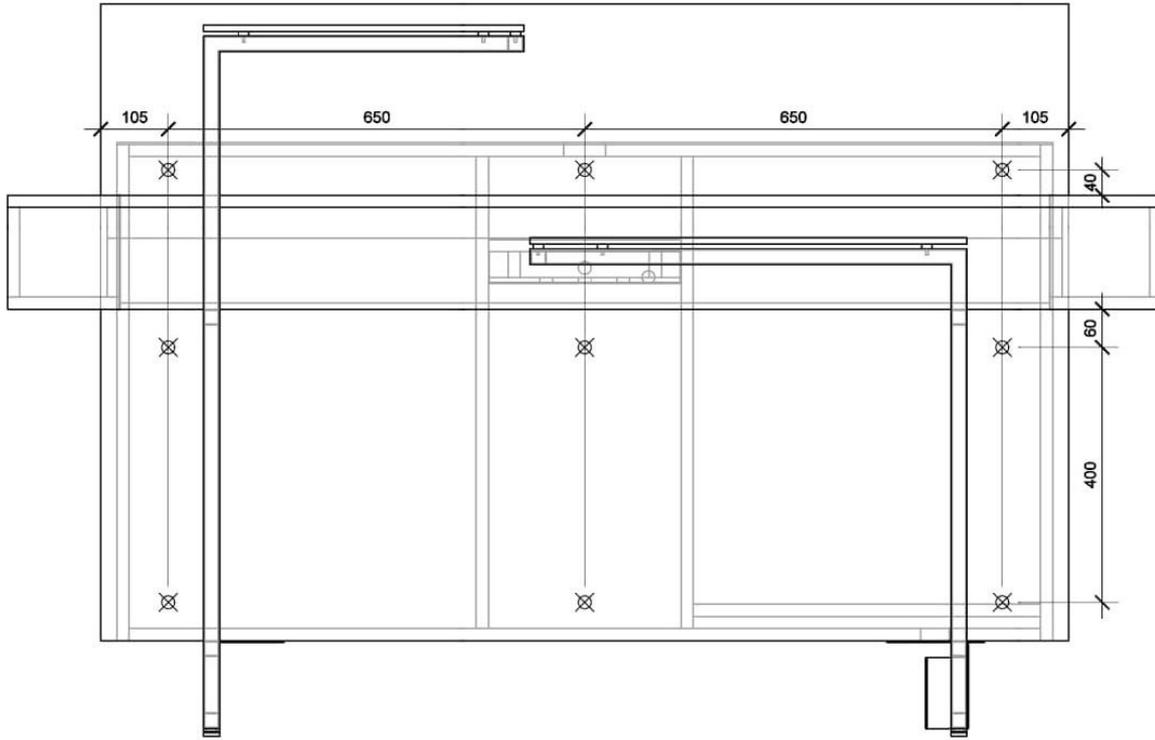


Abb. / illustr. 3

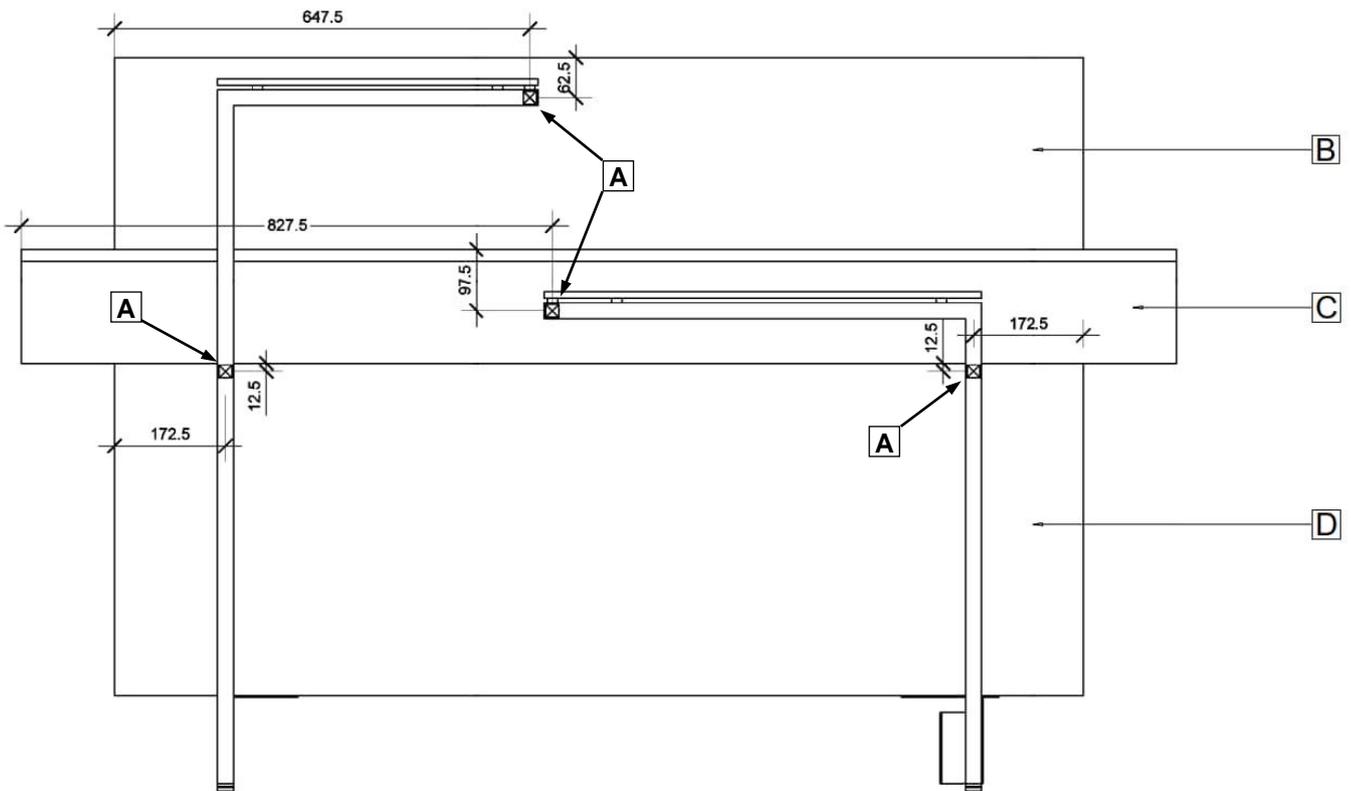


Abb. / illustr. 4

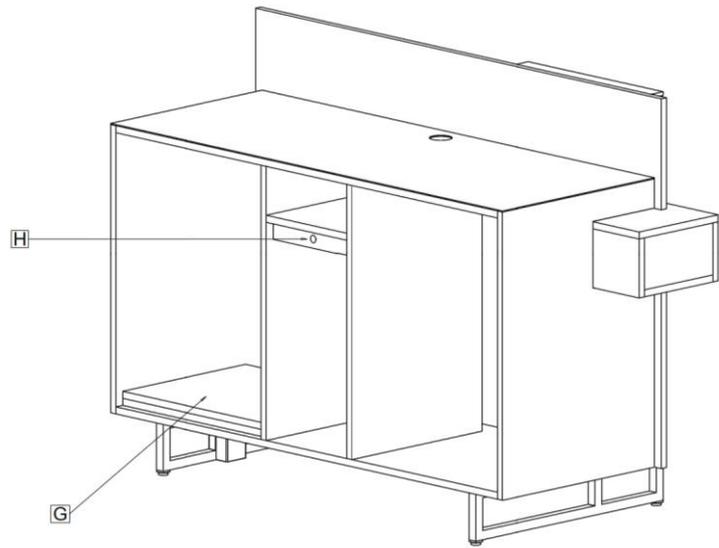


Abb. / illustr. 5


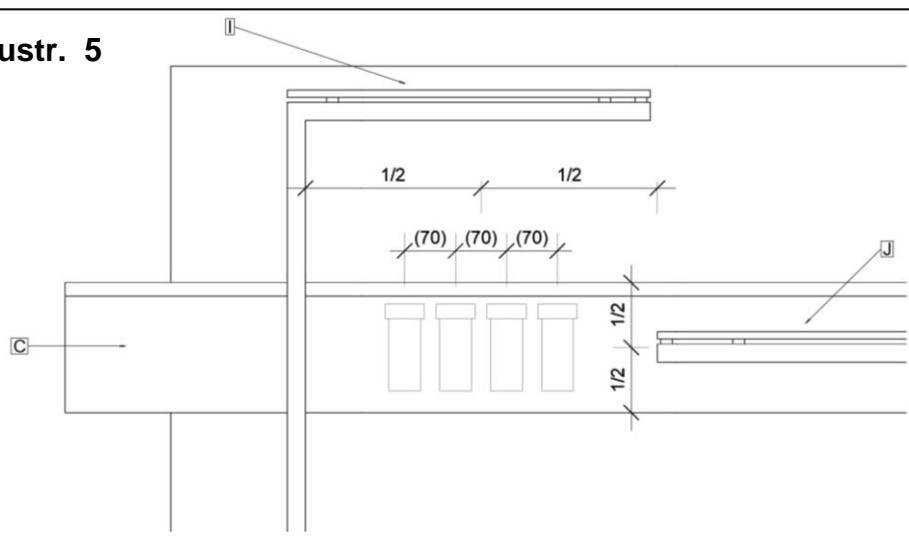


Abb. / illustr. 6

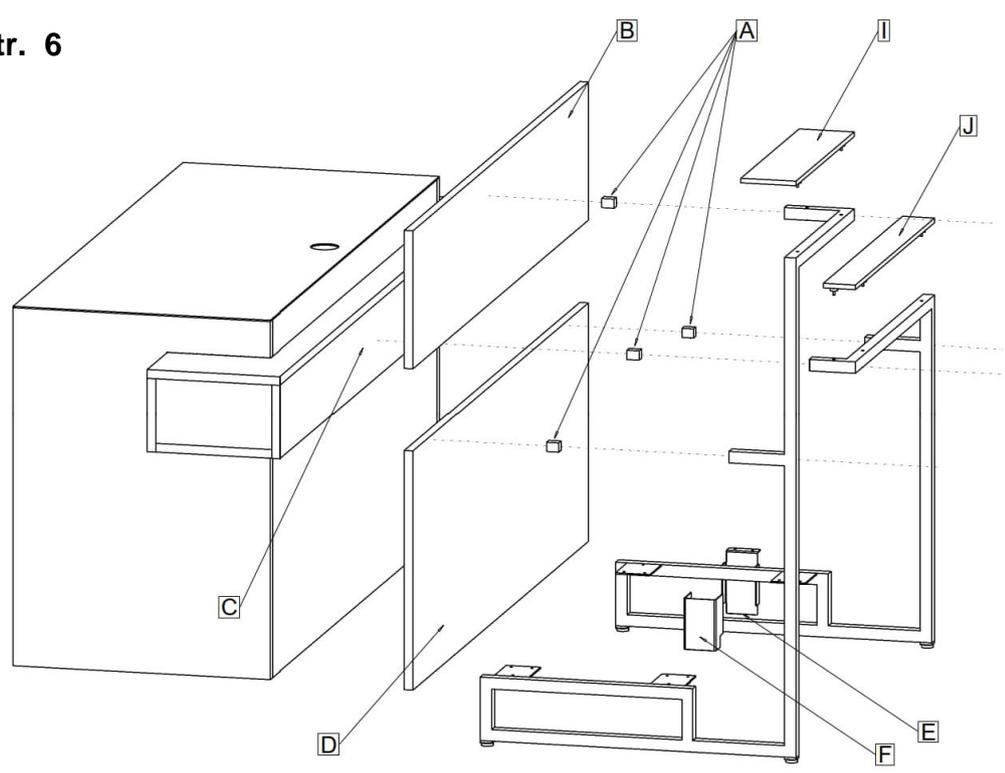

Montageanleitung:

1. Blenden an Korpus montieren

An der Rückwand der Rezeption von innen insgesamt 9 Bohrungen vornehmen (Abb.2) & kleine Blende oberhalb Einschubkorpus & große Blende unterhalb Einschubkorpus montieren (4x35mm).

2. Befestigungshülsen (A) für Metallgestell montieren:

Siehe Abb.3 und 6: 1x an Blende oben (B), 1x an Einschubkorpus (C) & 2x an Blende unten (D), mit 4,5x25mm montieren.

3. Metallgestell links + rechts montieren:

Metallgestelle auf Befestigungshülsen (A) aufschieben & unten am Korpusboden verschrauben (6 Schrauben je Gestellseite). Gestelle mit M6-Schrauben an Befestigungshülsen sichern.

4. Kabelkanal montieren:

Kabelkanal (E) von außen zwischen Metallstreben des Metallgestells unterhalb Bohrung im Unterboden schieben und über Flansch mit 2 Schrauben montieren. (4x20mm). Klemmdeckel (F) für Kabelkanal anbringen.

5. Rezeption aufstellen

Rezeption über Steckdose im Fußboden aufstellen (Abb.1).

6. Elektroanschluss für Beleuchtung (sofern bestellt):

Elektroboden (G) aus Elektro-Abteil entnehmen (Abb.4). Anschlusskabel mit Stecker in bauseitige Steckdose einstecken.

7. Funktionsprüfung der Beleuchtung (sofern vorhanden):

Schalter (H) in Korpus einschalten.

- Beleuchtung unterhalb Einschubkorpus leuchtet.
- wenn NICHT:
 - prüfen, ob Haussicherung eingeschaltet ist
 - prüfen, ob Stecker in bauseitige Steckdose eingesteckt ist

8. Zahlablage (I) & Taschenablage (J) montieren

Holzablagen mit Abstandshülsen 4mm und Spax 4x20 von unten durch den Ablageträger befestigen, dazu Ablage vorbohren (D 2,5mm / T 5mm).

Glasablagen mit Ablagehaltern mit Gewindestiften auf Ablageträger aufsetzen und von unten mit Muttern M4 befestigen.

9. Trinkgeld Dosen montieren (sofern bestellt):

Abb. 5: Platzierung auf Einschubkorpus (C) je nach Anzahl: in der Höhe mittig vom Einschubkorpus, in der Breite mittig zwischen Gestell Zahlablage (I) und Taschenablage (J).

Mounting instruction:

1. Mount panels onto corpus

Drill a total of 9 holes on the rear wall of the reception desk from the inside (illustr. 2) and mount the small panel above the slide-in body and the large panel below the slide-in body (4x35mm).

2. Mount the fastening sleeves (A) for the metal frame:

See illustr.3 and 6: mount 1x on the panel above (B), 1x on the slide-in body (C) and 2x on the panel below (D), with 4.5x25mm.

3. Mount metal frame L/H and R/H:

Push the metal frames onto the fastening sleeves (A) and screw them to the base of the corpus (6 screws on each side of the frame). Secure metal frames to mounting sleeves with M6 screws

4. Mount the cable duct:

Push the cable duct (E) from the outside between the metal struts of the metal frame below the hole in the underbody and mount over the flange with 2 screws. (4x20mm). Attach the cover (F) for the cable duct.

5. Place the Reception desk

Place the Reception desk over the plug socket in the floor (illustr.1).

6. Electrical connection for lighting (if ordered):

Remove the electrical base shelf (G) from the electrical compartment (illustr. 4). Insert the connection cable with the plug into the on-site socket.

7. Functional test of the lighting (if ordered):

Switch on the switch (H) in the corpus

- the lighting below the slide-in unit lights up.
- unless:
 - check whether the house fuse is switched on
 - check whether the plug is plugged into the on-site socket

8. Mount cash plate (I) and handbag shelf (J):

Fasten **Wooden shelves** with spacer sleeves 4mm and chipboard screws 4x20 fasten from below through the shelf support, to do this pre-drill shelf (D 2.5mm / T 5mm).

Put **Glass shelves** with shelf holders and threaded pins onto shelf supports and fasten from below with nuts M4.

9. Fasten tip boxes (if ordered):

illustr. 5: Placement on the slide-in body (C) depending on the number: in the middle of the slide-in body in terms of height, in the middle between the cash plate (I) and handbag shelf (J) in width.